16. SERIAL NUMBER AND SOFTWARE VERSION
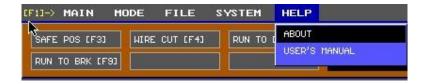
I.   Check current version of software
   a. With Machine On, Press F1 to access the menu bar
   b. User the right arrow key until you reach the HELP section
   c. When ABOUT is highlighted, press the "Enter" key.

II.   The following screen will be displayed
   a. Write down the Version and Serial Number for later use.