


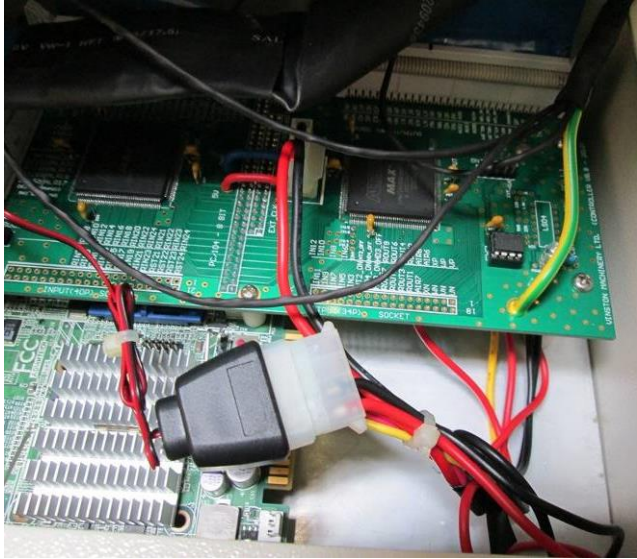


## 18. COMPUTER MAINTENANCE

Item	Maintenance	
Computer Unit	<p>Remove dust from the computer circuit boards at least every three months. Use air canister type cleaners and check for soldering abnormalities. If the work environment is dusty, clean the machine more frequently.</p>	
Monitor	<p>Use air canister type cleaners to remove dust from the air vents behind the monitor at least once every three months. Clean the monitor with a soft clean cloth. (No longer applicable after 2015 models)</p>	
Keyboard	<p>If the keyboard has the protective cover, clean the cover every month. If no protective cover is used, clean the keyboard monthly. The keyboard should also be tilted 180° to check for debris caught between the keys or contacts.</p>	

<p>Supply and Junction Boxes</p>	<p>Use air canister type cleaners to clean the surface once a month. AC units have filters that can be removed for cleaning. If the work environment is dusty, clean the machine more frequently.</p>	
<p>Sample Collection Bins (CSA)</p>	<p>May require custom bins for clearance according to CSA standards – front of bins will need to be higher to block access to front of machine while the back of the bin will be lower to provide clearance for servo slides and cables.</p>	